




Supplementary Installation Instructions For Optional Sealing Of Dampers In Fire And/OR Smoke Rated Wall Or Floor Openings

NOTE: This is NOT a recommendation by Prefco for application of sealant. If sealant is required by the local code authority, these instructions then apply.

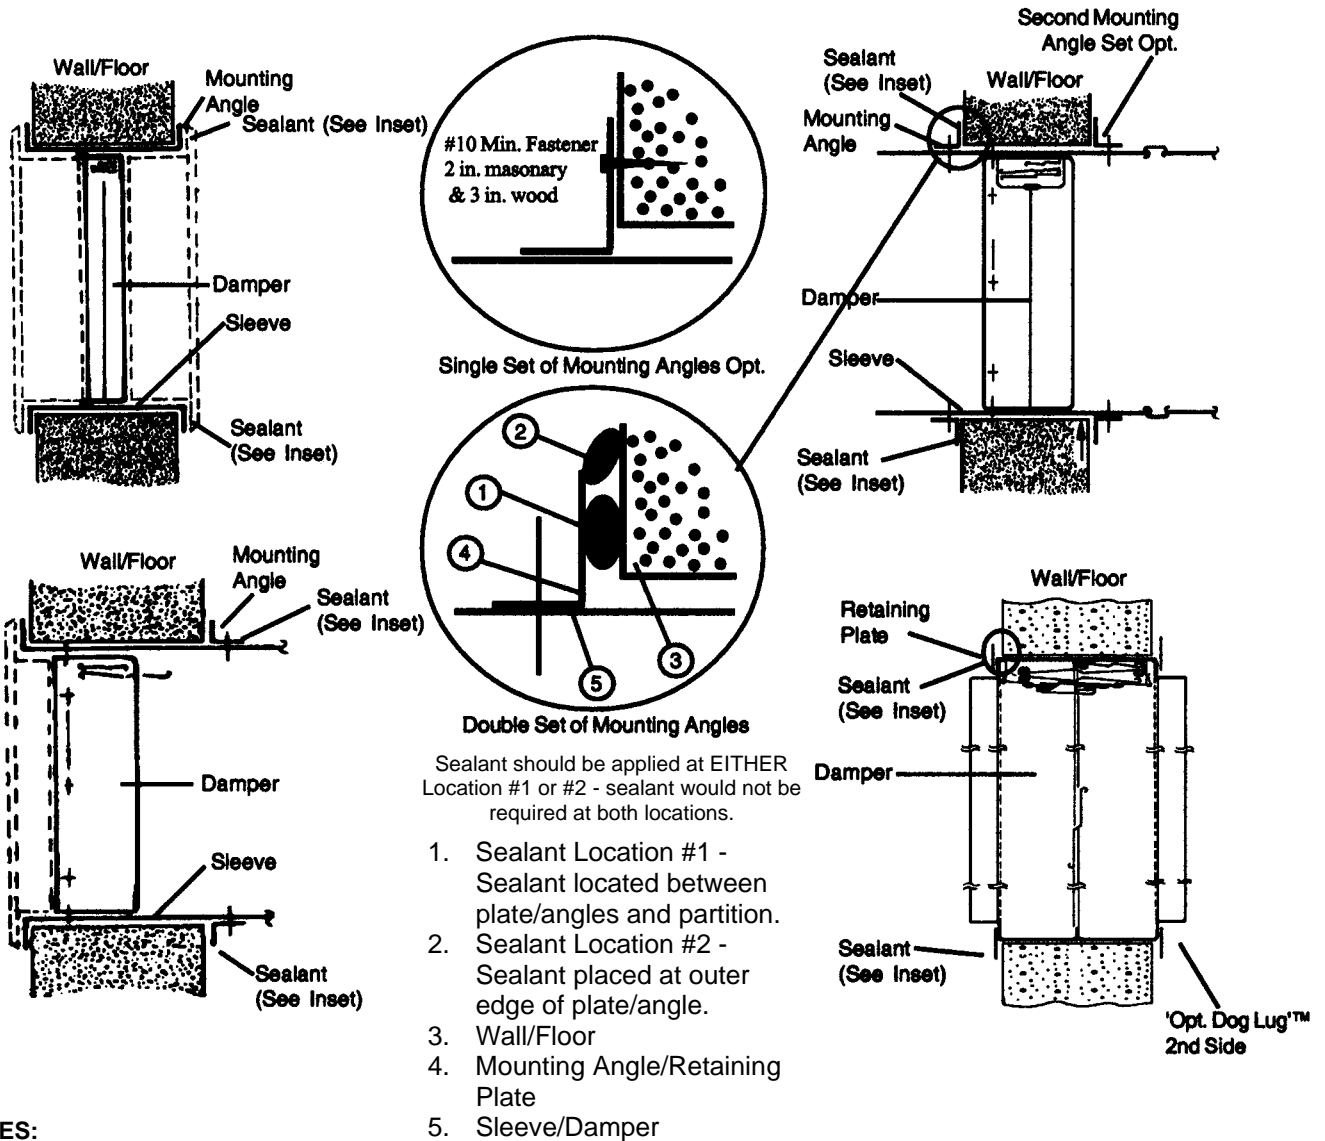

NOTES:

- A. Application of sealant between the mounting angles or retaining plates and the fire rated wall or floor is not required by Underwriters Laboratories. Caulking is not normally necessary because of damper expansion is caused by fire heat; or smoke system pressurization seals the damper gaps in the opening. However, if a seal is required by code authority on these areas, sealant shall be applied as described here.
- B. Following the sealant manufacturer's directions, apply a continuous bead of a heat pliant sealant (such as Dow Corning Silastic 732RTV or GE RTV 108 sealant). Location of sealant should be shown in inset as applicable to your specific installation.
- C. Press the surface of the sealant in place to dispel any air. Allow sealant to set up and become tack-free before operating the damper. Be sure the sealant is applied to the entire perimeter of all four mounting angles - on one side only.
- D. Refer to the appropriate damper installation instructions for details on damper installation.

REPRESENTED BY

**MANUFACTURED BY
PERFECT AIR CONTROL, INC.**

1310 N. HERCULES AVE. CLEARWATER, FL 33765
CUSTOMER SERVICE (800) 437-6653 * ORDER ENTRY FAX (727) 431-6074
www.prefco-hvac.com