





Rated per UL555, UL File R6189

Supplementary Installation Instructions for Multiple Section Assemblies Using Model 5500 E2 Type Static Fire Dampers For use in Horizontal and Vertical Ducts.

These Instructions apply also to masonry construction

NOTES:

1. Assemble the damper sections together as shown at right.
2. Fasten the frames together with 1" long tack welds on a maximum of 6" center to center on both sides of the frames as shown below.
3. Multiple section damper assembly should be installed into the sleeve and then the wall/floor opening as per Sheet #5500II-2.
4. Vertical mount multiple section damper assemblies may exceed 23" maximum width when the generic mullion is used. Refer to Sheet GenII-1 for mullion details. For drywall installation, refer also to GenII-2.

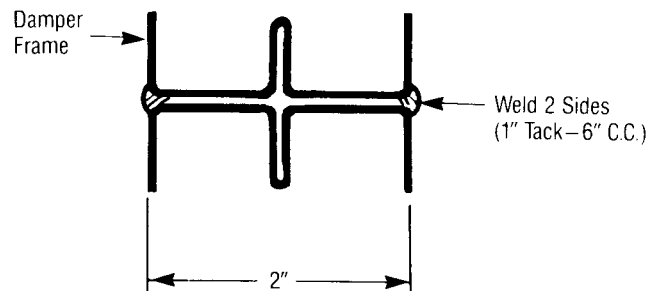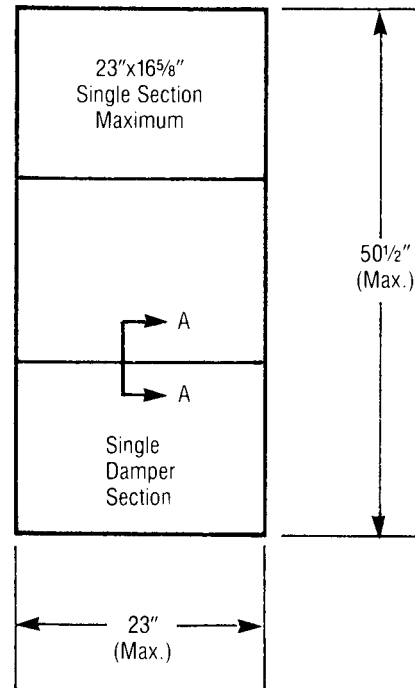

SECTION A-A

REPRESENTED BY

MANUFACTURED BY
PERFECT AIR CONTROL, INC.
1310 N. HERCULES AVE. CLEARWATER, FL 33765
CUSTOMER SERVICE (800) 437-6653 * ORDER ENTRY FAX (727) 431-6074
www.prefco-hvac.com